

PRODUCT DATA

4445

Sprayable Seam Sealer Gun


DESCRIPTION:

Sprayable Seam Sealer Gun is designed for use with 4172 Ultra Flex™ Adhesive & Seam Sealer and 4182 Ultra Flex™ Sprayable Seam Sealer.

COMPONENT IDENTIFICATION:

Air Cap Assembly

Cylinder Pressure Gauge

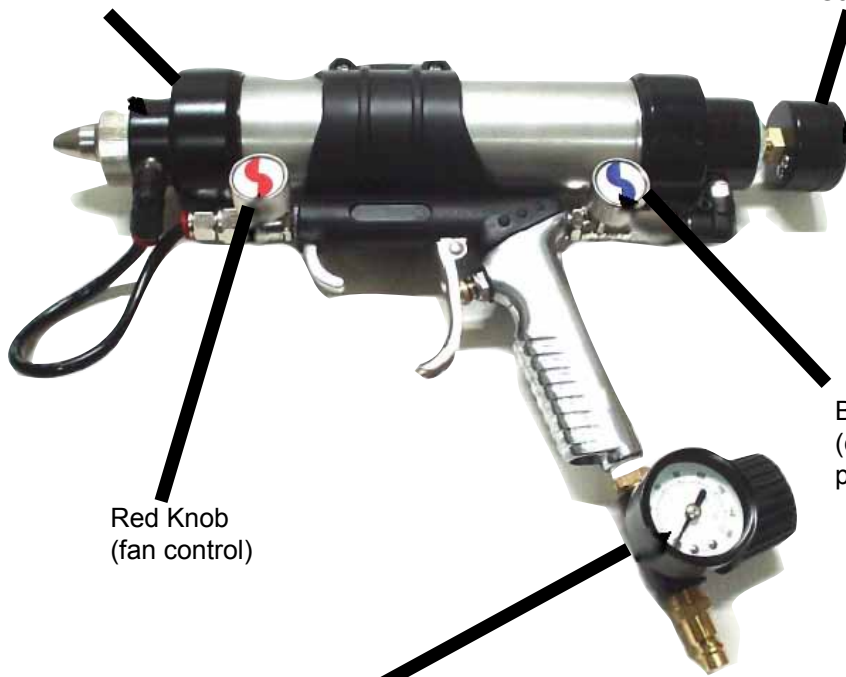

Red Knob
(fan control)

Blue Knob
(cylinder pressure)

Inlet Regulator



On



Off

PRODUCTS:

4445 Sprayable Seam Sealer Gun, 1/case

See website (www.tat-co.com) for this document in other languages.

Vea el Web site (www.tat-co.com) para este documento en español.

Voir le site Web (www.tat-co.com) pour ce document en français.

Sprayable Seam Sealer Gun


SPRAYING



Disconnect the air tube by pulling back on the black grommet while gently pulling the tube out. Remove the air cap.



Cut the tip of the seam sealer tube. Thread the tube onto the air cap and install the cap and tube on the gun.

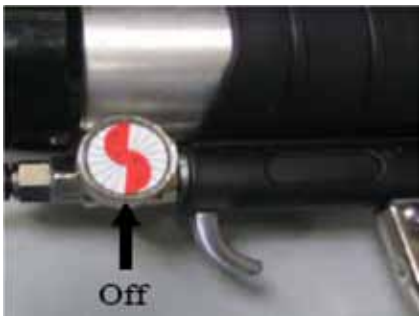

Insert the air tube. Turn both knobs to the off position and connect the air supply. Set the inlet air pressure to 60 PSI. Turn the blue knob and set the cylinder pressure to 60 PSI. On a piece of cardboard test spray the product by adjusting the red knob to achieve the desired pattern.

BEAD




Disconnect the air tube by pulling back on the black grommet while gently pulling the tube out. Remove the air cap. Insert the caulk tube and cover. Be sure you have cut/pierced the tube and installed the included rubber gasket.

(Continued on next page)

4445

Sprayable Seam Sealer Gun

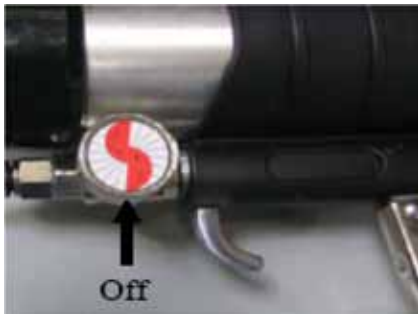

Set and leave the red knob in the off position. Set the inlet pressure to 40 PSI. Using the blue knob set the chamber pressure to 20 PSI. On a piece of cardboard test the bead flow. If needed, adjust the chamber pressure (max 40 PSI) to achieve the desired flow.

Note: If you experience “popping” of the sealant while dispensing simply lower the inlet pressure.



CLEANING

Disconnect the air supply. Pull the trigger of the gun to purge any air pressure in the gun. Disconnect the air tube by pulling back on the black grommet while gently pulling the tube out.

Remove the air cap and seam sealer tube. Disconnect the tube from the air cap.



Remove the spray tip from the air cap. Using the included angle ring wrench remove the fluid tip.

Use lacquer thinner and a soft bristle brush to clean the fluid tip and air cap.

